1880339
Victorian Footstool
Parts and Hardware List

A.	Frame	1 pc
B.	Legs	4 pcs
C.	Cushion	1 pc
D.	Hex Nuts	4 pcs
E.	Lock Washers	4 pcs
F.	Flat Washers	4 pcs
G.	Hex Wrench	1 pc

∗ Please make sure that you have all the parts and hardware indicated above before you begin assembly of this item.
∗ Use the hardware illustration to determine correct piece and size.
∗ This item should be assembled on a soft surface to prevent scratching the finish during assembly.
∗ This item may require periodic tightening.

Hardware Illustrations

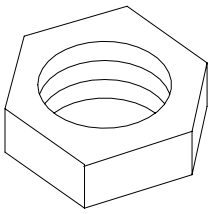

D. Hex Nut



E. Lock Washer

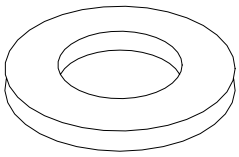

F. Flat Washer

1880339
Victorian Footstool

Parts required

A.	Frame	1 pc	E.	Lock Washers	4 pcs
B.	Legs	4 pcs	F.	Flat Washers	4 pcs
C.	Cushion	1 pc	G.	Hex Wrench	1 pc
D.	Hex Nut	4 pcs			

1. **Attach Legs (A)** Insert the exposed threads of the Legs (B) into the four corners of the Frame (A) as shown in illustration. Place one Flat Washer (F), one Lock Washer (E) and one Hex Nut (D) onto the exposed threads of each Leg (B). Secure Hex Nut (D) in position with the Hex Wrench (G). Tighten in a clockwise direction. Refer to the Illustration.
2. **Attach Cushion (C)** Place the Cushion (C) into the top of the Frame (A).

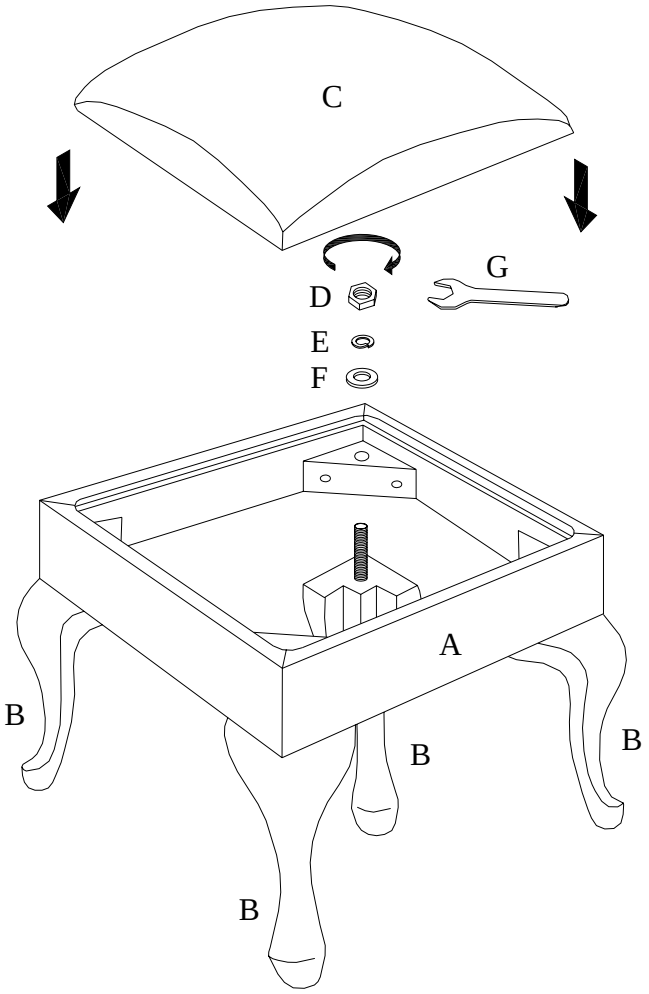

Illustration